 


# Wall Mounted (Shower) Body Jets

*Adjustable (A) and Fixed (F)*

*Product shown may vary depending on model*

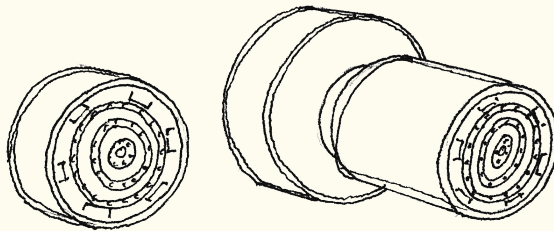

***Important information:***

To ensure this product is installed properly you must read and follow these guidelines.

The owner/user of this product must keep this information for future reference.

This product must be installed by a professional licensed contractor.

Only use a strap wrench or protected smooth jaw on any finished surface.

**ORE**

## Guarantee and Aftercare





When installing or using tools, extra care must be taken to avoid damaging the finish or fitting. To maintain the appearance, please ensure it is cleaned regularly using a clean soft damp cloth only. Abrasive cleaners or detergents must not be used as they may cause surface deterioration. The company provides a guarantee against faulty material or manufacture excluding serviceable parts, providing they have been installed, cared for and used in accordance with our instructions.

More information on our Warranty and Aftercare can be found on our website.

- The company reserves the right to continually evolve its product lines without notification.
- The company will not accept any liability regarding specification changes and their consequences unless previously quoted by the company in writing.



## Installation Procedure

- Prior to installation please ensure that all supply pipes have been flushed through to remove any debris and then ensure the water supply is turned off.
  - Prepare and fit/fix all pipe work and flexible hose connections behind the surface wall securely.
  - Drill a hole in the surface walls (inner surface wall *and* outer tiled surface wall) between 21mm and 25mm diameter.
  - PLEASE NOTE: The Thread Connection of the Body Jets is a Male 1/2" BSP.
- Ensure your connectons to the Body Jets are compatible. Please use a compatible female thread.
- Secure the Body Jet from behind surface wall by connecting all pipe work/flexi hoses as required depending on your installation procedure through the hole previously drilled.
  - Seal the Body jet with a suitable sealant to the outer surface of the wall.
  - We advise that all water feed connections are tested prior to final sealing of outer wall surface and that there are no leaks.
  - Check the assembled fit of the products to the shower/wall ware to ensure there is no water ingress that may cause water damage after installation.

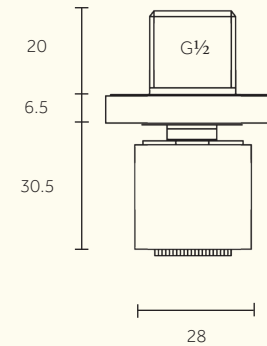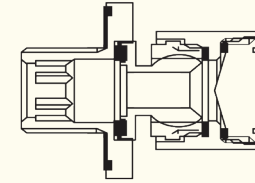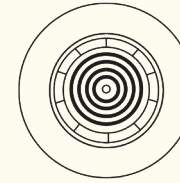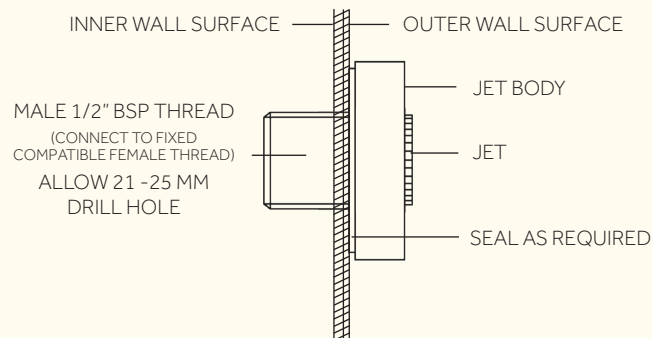


*Wall Mounted Body Jet : Adjustable (A)*

Min/Max Operating pressure: (bars)	1.0 - 3.0					
Flow rates: Bar/L per min (without Aerator)	0.5/4.5	1 /6.2	1.5/7.3	2 /8.1	2.5/8.5	3 /8.6
Connection:	1/2" BSP					
Flow Restrictor:	✓					

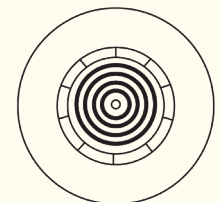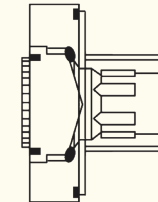

*Wall Mounted Body Jet : Fixed (F)*

Min/Max Operating pressure: (bars)	1.0 - 3.0					
Flow rates: Bar/L per min (without Aerator)	0.5/4.5	1 /6.1	1.5/7.2	2 /8.0	2.5/8.3	3 /8.4
Connection:	1/2" BSP					
Flow Restrictor:	✓					

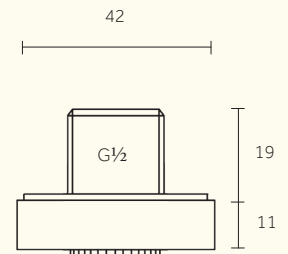

INSTALLER DETAILS:

**ORE**